

# HOMEFACTORS

## FURNISHING CONSULTANTS

Homefactors Ltd, P O Box 2661, Buckhurst Hill, Essex IG8 1SN

Tel 020 8203 3166

Email: [info@homefactors.co.uk](mailto:info@homefactors.co.uk)

Website: [www.homefactors.co.uk](http://www.homefactors.co.uk)


## HOW TO MEASURE FOR YOUR ROLLER BLINDS

Decide if you want the blind to fit inside or outside the window recess. Measure the width at the point of fitting, eg if fixing inside the recess, measure the width inside the top of the recess. Measure accurately using a wood or metal rule (not a cloth tape which may stretch). Use either Imperial (inches) or Metric. When you advise your measurements, please give the width first, then the drop, and say whether they are Imperial or Metric.

### Fixing Inside

Give the full recess width and drop dimensions. Measure at several points to ensure that the dimensions do not change significantly. Please advise these measurements as the **pin width** and the drop and say the blind is to fit inside the recess.

Your blind will be made with the necessary allowances and will be supplied with the fabric approximately 1.25" (32mm) narrower than the pin width.

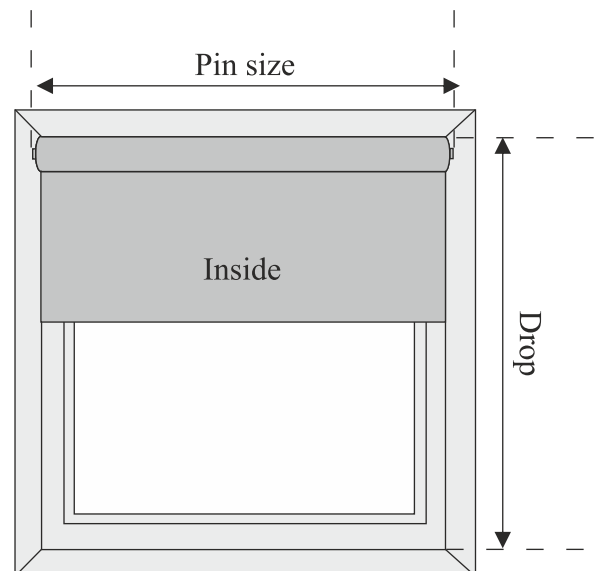

### Fixing Outside

Decide by how much you wish the **fabric** to overlap on each side of the recess and measure the total width, including the fabric overlap. Your drop should allow for whatever overlap is required at the top and/or bottom of the window.

Please advise these measurements as the **blind width** and the drop and say the blind is to fit outside the recess.

Your blind will be made with the pins approximately 1.25" (32mm) wider than the fabric size.

