

HOMEFACTORS


FURNISHING CONSULTANTS

Homefactors Ltd, P O Box 2661, Buckhurst Hill, Essex IG8 1SN
020 8203 3166 info@homefactors.co.uk

How TO MEASURE FOR YOUR CURTAINS

TO CALCULATE THE COST OF YOUR CURTAINS YOU NEED TO KNOW THE REQUIRED WIDTH AND THE DROP. AS CLOTH TAPE MEASURES CAN STRETCH WITH AGE AND USE PLEASE USE A METAL TAPE OR STEEL RULE FOR ACCURACY.

THE **WIDTH MEASUREMENT IS THE WIDTH OF THE TRACK**, NOT THE WIDTH OF THE WINDOW. TRACK IS USUALLY FITTED OUTSIDE THE WINDOW REVEAL AND EXTENDS A FEW INCHES FURTHER THAN THE WINDOW ON BOTH SIDES.

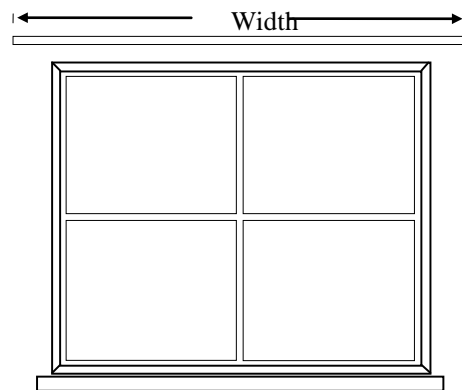

THE DROP IS MEASURED FROM THE POINT WHERE THE TOP OF THE CURTAIN WILL BE TO THE LOWEST POINT (WHERE IT IS TO FINISH). REMEMBER TO ALLOW FOR CLEARANCE ABOVE RADIATORS AND CARPETS.

FOR A BAY WINDOW WE ASSUME THAT ONE LENGTH OF TRACK AND ONE WIDE PAIR OF CURTAINS WILL COVER THE ENTIRE WIDTH. IF THE WAY YOUR WINDOW FRAMES ARE FITTED WILL NOT ALLOW FOR THIS, THE BAY WOULD BE HUNG AS ONE WIDE PAIR (AT THE CENTRE) AND ONE NARROWER PAIR (ONE EACH TO THE RIGHT AND TO THE LEFT) WITH, POSSIBLY, THREE SEPARATE PIECES OF TRACK.

DO NOT MAKE ANY ADDITIONAL CALCULATIONS TO ALLOW FOR DOUBLE FULLNESS - THIS HAS ALREADY BEEN TAKEN INTO CONSIDERATION ON THE PRICING GRID.

WHEN YOU QUOTE THESE DIMENSIONS TO US PLEASE GIVE THE WIDTH FIRST AND THE DROP SECOND AND SAY WHETHER YOU HAVE MEASURED IN INCHES OR METRIC.